

Programme Times - E-Care+

Please note - programme times may vary due to the particular load being washed, the type of fabrics within in the load and the temperature of the water entering the machine. All times are indicative of the duration of that particular programme.

Programme	Temperature	Programme Time
Refresh	20°C	35 minutes
Quick	20°C	28 minutes
Dark	40°C	1 hour 45 minutes
Quiet	40°C	1 hour 24 minutes
Rinse & Spin	20°C	53 minutes
Allergy Care	60°C	2 hours 16 minutes
Cotton Saver	60°C	2 hours 6 minutes
Cotton	60°C	4 hours 2 minutes
Synthetic	40°C	1 hour 19 minutes
Delicate	20°C	1 hour 6 minutes
Mixed	40°C	1 hour 35 minutes
Spin Only	20°C	19 minutes
Hand/Wool	30°C	45 minutes
Drum Clean	90°C	1 hour 22 minutes